

MH2015 Flash Head

- ① 2000 w/s flashtube (2405)
- ② 250 watt model lamp (0515)
- ③ Ratchet handle
- ④ Stand Knob
- ⑤ Umbrella Knob
- ⑥ 16' Head Cable
- ⑦ Cooling Fan



Dynalite MH2015 Flash Head Instruction Manual



dynalite
dynamic lighting

1050 Commerce Ave
Union, NJ 07083
800-722-6638 / Fax 908-686-6682
flash@dynalite.com
www.dynalite.com

dynalite
dynamic lighting

Important Safeguards

When using your photographic equipment, basic safety precautions should always be followed, including the following:

1. Read and understand ALL instructions.
2. **DO NOT** touch the model lamp(s) or flash tube(s) as an injury could occur.
3. **DO NOT** operate the equipment with a damaged cord or if the equipment has been dropped or damaged, until the equipment has been checked by an authorized service station.
4. Care should be taken to arrange the flash head cable(s) so that it will not be tripped over or pulled out.
5. When not in use, unplug the power pack from the electrical outlet. Never yank the cord to pull the plug from the outlet. Grasp the plug and pull to disconnect.
6. Let the flash heads cool completely before pulling away. Loop head cable(s) in an 8" to 10" diameter when storing.
7. **DO NOT** allow cord(s) or head cable(s) to hang on or touch hot surfaces.
8. To avoid electrical shock hazard, do not disassemble equipment, take it to a qualified service station when service or repair is required. Incorrect reassembly could cause an electrical shock hazard when the equipment is subsequently used.
9. **DO NOT** use locking rings at power pack end of the extension cable.
10. The use of a properly grounded AC outlet is recommended. Failure to do so could result in electrical shock hazard.
11. **DO NOT** attempt to remove the flash tube assembly or the model lamp without first allowing them to cool. After cooling, unplug the flash head from the power pack and remove flash tube assembly and / or model lamp.
12. When attaching and removing flash head accessories, slide the metal spring clips on and off one at a time. This will facilitate ease of use for all accessories.

Your new Dynalite flash head is designed to allow user replacement of the flash tube and model lamp. We request that you read the safety precautions and follow them completely.

Flash Head Set-up

1. Unpack your new Dynalite flash head and check that all the items are accounted for in accordance with the shipping list (rear cover)
2. Remove plastic cover from the flash head.
3. Attach cable from the MH2015 head (16") which is non-detachable from the head.

Model Lamp Replacement

1. Unplug flash head from the power pack. (Allow to cool if hot.)
2. Remove model lamp from box, being careful not to touch the quartz envelope. **NOTE:** leave the safety wrapper around the model lamp envelope.
3. Hold flash head in hand in vertical position or on a flat surface.
4. Removal is accomplished by pushing model lamp in and rotating counter clockwise. **Note:** Be sure to use safety paper or similar material in case lamp is still in working order.
5. To install, visually align model lamp bayonet pins with model lamp socket in flash head. Install with a push and clockwise rotation. Release lamp and check that it is secured. Remove the safety paper.

Flash Tube Replacement

1. Unplug flash head from the power pack, (Let flash head cool before continuing.)
2. Grasp the reflector assembly by the edge and pull the tube straight out. A slight left to right wiggle will aid in removal.
3. To replace flash tube, position flash head with handle on flat surface. Align the three (3) pins of the tube with the three (3) sockets in the flash head. And gently push the reflector assembly until it is flush with the end of the head cup.